Lenco

XEMIO-950

User Manual

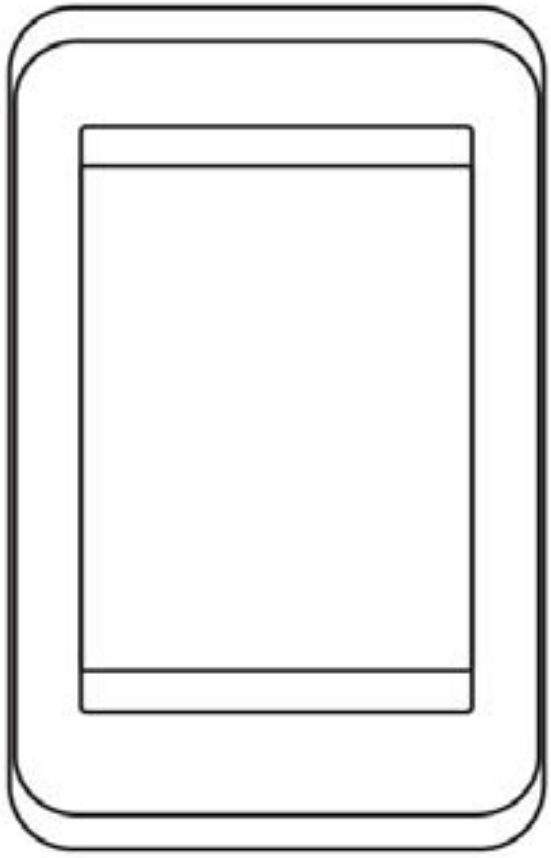

For information and support, www.lenco.eu

What’s in the box?

Operating Unit

User Manual

USB Cable

Earphone

Installation CD

Content

Buttons location and usages 1

Basic Operation 2

Operation of Music Mode 3 - 6

Operation of Video Mode 6 - 8

Operation of Photo Mode 9

Operation of Record Mode 9 - 10

Operation of Apps Mode 10

Operation of Charging 10

Operation of E-Book Mode 11

Operation of Settings Mode 12

Operation of Radio Mode 13

Technical Specification 14

Trouble Shooting 14

Buttons location and usages

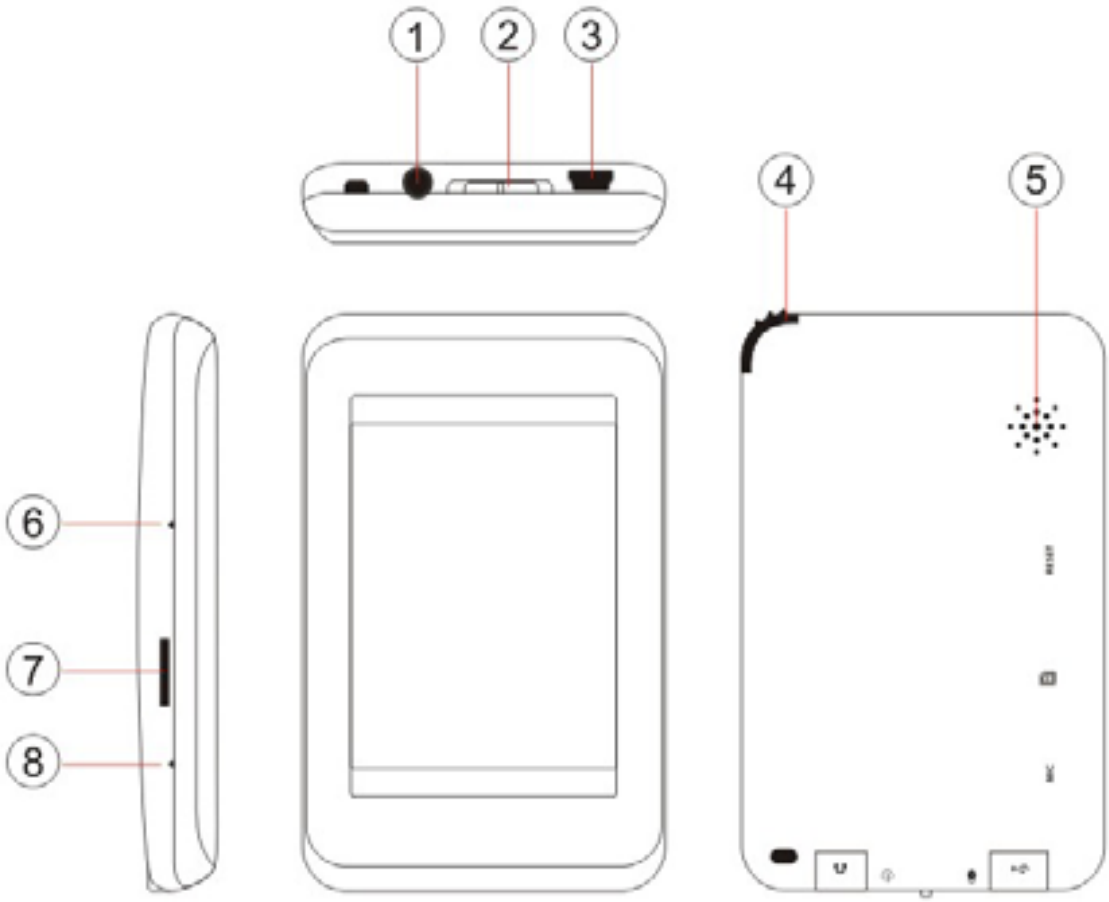

(1) Earphone Jack
(2) ON/OFF/Lock Button
(3) USB Port
(4) Touch Pen
(5) Speaker
(6) Reset Button
(7) Micro SD Card Slot
(8) Microphone

Basic Operation

Power on/off and Lock

Slide the ON/OFF/HOLD switch to the on position and hold for 3 seconds to switch on the device. Slide the switch to the LOCK position to key-lock the player.

Main interface

Once your switch the player on you'll reach to the main interface as below..

Operation of Music Mode

Use the touch pen provided to touch on the main menu to enter the music mode. Once you've entered the music mode, the following screen would show up.

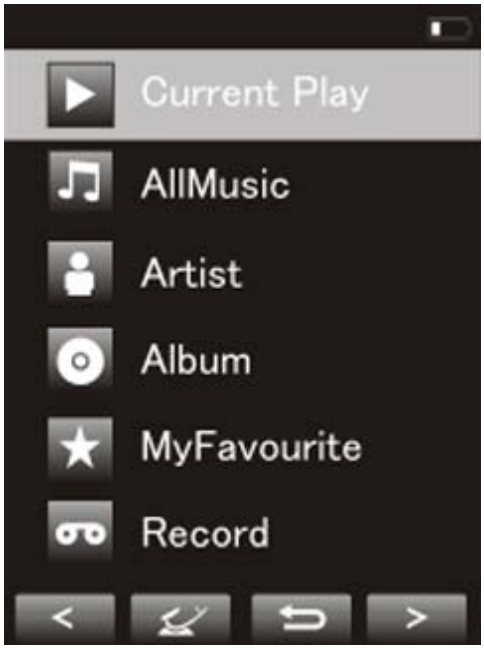

Current play

Double click the **Current Play** icon to resume playing the current song.

All Music

Double Click the **All Music** icon to show your library of music, double click any particular song to start playing.

Artist

Double Click the **Artist** icon to show all of your artists, double click any particular artist to show the songs of that artist. Double click a song to start playing.

Album

Double Click the **Album** icon to browse all of your albums, double click any particular album to browse the songs of that album. Double click a song to start playing.

My Favourite
Double Click the **My Favourite** icon to browse all songs that you've added to be your favourite. Double click a song to start playing.

Record
Double Click the **Record** icon to browse all recorded files. Double click a file to start playing.

Click to jump back to the main menu.

Music Player interface

Whenever you start playing a song you'll reach the Music Player Interface as below.

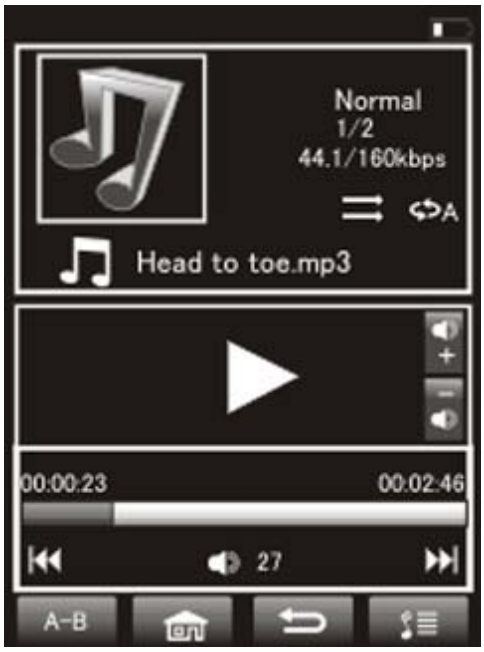

Play Music

Double click the **Play** button in the middle to start playing, double click again to pause.

Volume

Double click or to adjust the volume.

Previous / Next

Click to jump to the next song, and click to jump back to the previous song.

Play Option

Double click the to enter the Play Option Menu. You can set your preference in **Repeat Mode / Play Mode / MSEQ / EQ Setting / User EQ Setup.**

Repeat Mode

Double click **Repeat Mode** to choose from Once / Repeat / All / All Repeat / Intro. Once you've selected, double click to confirm and return to sub-menu.

Play Mode

Double click **Repeat Mode** to choose from **In Order** or **Shuffle Play**. Once you've selected your choice, double click to confirm and return to sub-menu.

MSEQ

Double click **MSEQ** to choose different sound effect from **3D / Bass / LEQ**. Once you've selected your choice, double click to confirm and return to sub-menu.

EQSel

Double click **EQSel** to choose different EQ from **Normal / MSEQ / Rock / Pop / Classic / Bass / Jazz / UserEQ**. Once you've selected your choice, double click to confirm and return to sub-menu.

USER EQ Setup

Double click **User EQ Setup** to adjust your own EQ Setting. Once you've selected your choice, double click to confirm and return to sub-menu.

A – B Repeat

Click once to set the starting point of the **A-B Repeat**, then click again to set the ending point. The A-B repeat setting is done. To cancel A-B repeat mode, click again.

Lyrics

Click to choose to display lyrics.
*The player only supports **.LRC** lyric.

Operation of Video Mode

Use the touch pen provided to touch on the main menu to enter the video mode. Once you've entered the video mode, the following screen would show up.

Click any particular movie in the list to start playing.

Basic Video Control

The following control panel will show up when a video start playing.

Click to choose previous movie, hold to rewind. Click to choose next movie, hold to fast-forward. Click / to adjust the volume. Click to resume playing from where the video stopped last time.

Video Files Supported

AVI File:

Codec:	XVID
Resolution:	Max. 800x480
Audio Codec:	MP3

WMV File:

Codec:	WMV 7/8/9
Resolution:	Max. 720x480
Audio Codec:	WMA

DAT File:

Codec:	MPEG-I
Resolution:	Max. 768x576
Audio Codec:	MP3

FLV File:

Codec:	Sorenson H.263
Resolution:	Max. 640x480
Audio Codec:	MP3

RM File:

Codec:	Real Video Codec 8/9/10
Resolution:	Max. 800x480
Audio Codec:	Real Audio

RMVB File:

Codec:	Real Video Codec 8/9/10
Resolution:	Max. 800x480
Audio Codec:	Real Audio

Operation of Photo Mode

Use the touch pen provided to touch on the main menu to enter the photo mode. Once you've entered the photo mode, the following screen would show up.

Basic photo control

Click on a particular photo, and click to open it. Click to rotate 90 degree left, and click to rotate 90 degree right. Click to zoom into the photo. Click to jump back to the previous photo, click to jump to the next photo

Operation of Record Mode

Use the touch pen provided to touch on the main menu to enter the record mode. Once you've entered the record mode, the following screen would show up.

Basic record control

Click to start recording. Click to pause recording, click again to resume recording. Click to stop recording.

Operation of Apps

Use the touch pen provided to touch on the main menu to enter the apps menu.

Explorer

Click on “Explorer” to enter the file managing mode. To delete a file, click a file to highlight it, and then click to delete it.

Stopwatch

Click on the “Stopwatch” to enter the stopwatch mode. Flip the power switch once to start counting time, flip the switch again to pause it. Flip the power switch to continue the time counting. Click to reset the current time count.

Operation of Charging

When charging, if the battery logo is running, means it is still charging, if the battery logo is full, menas the charging finished.

When connected with PC, you need to shut off icon in your PC to see the status of charging.

Operation of E-book

Use the touch pen provided to touch on the main menu to enter the e-book menu. Once you've entered the e-book menu, the following screen would show up.

Basic e-book control

Double click on a particular .txt file to open the e-book. When opened an e-book file, click to go back to previous page, click to skip to the next page. Click to enter the E-Book sub-menu.

E-book Sub-menu

Page Jump: Input the page number that you'd like to jump to.
SaveMark: Choose any empty slot to save your bookmark to.
LoadMark: Load any previously saved bookmarks.

DelMark: Delete any unwanted bookmark from slots.
SetFont: Set the font size from Small, Middle to Big
SetColor: Set the font color
Browser Mode: Choose from automatic flipping and manual flipping
FlipTime: Choose from the time interval between every auto flip, from 10 sec to 30 sec.
Mode: Choose from 3 different background themes

Operation of Settings Mode

Use the touch pen provided to touch on the main menu to enter the settings menu. Once you've entered the settings menu, the following screen would show up.

Display Setting
Click in to adjust Light Time, Screen Brightness, Light Mode and Screen Move Style.

System Setting
Click in to upgrade firmware, to restore to default setting or to calibrate your screen.

Language
Click in to choose your desired language

System Information
Click into system information to check the firmware version, the memory size and card memory size.

AutoShut Time
Click into AutoShut Time to set the auto shut down time of the player, from 3 minutes to No Automatic Shutdown.

Operation of Radio Mode

Use the touch pen provided to touch on the main menu to enter the radio menu. Once you've entered the radio menu, the following screen would show up

Basic Radio Control

Click and to perform manual search of radio channels. Hold and to perform auto search.Click and to adjust the volume. Click to enter the Radio sub-menu.

Radio Sub-menu

Auto search: Click to auto search thru all the channels.
Save Channel: Click to save the current channel into 1 of the 30 slots.
Delete Channel: Click to delete the channel saved in the memory slots.
Stereo Switch: Click to choose to turn on or turn off the stereo switch
Receive area: Click to choose the area of receiving the signal (from China, Japan, USA, Europe and Campus Radio)
FM Record: Click to start recording the current radio broadcasting

Technical Specification

Flash Memory	128MB – 16GB
Micro SD Card	Max. 8GB
MP3 compressed rate supported	MP3(64 – 320 kbps) WMA(64-384kbps) WAV
Video format supported	AVI, WMV, DAT, FLV, RM, RMVB
Photo format supported	JPEG/BMP/GIF
Battery	Lithium rechargeable battery
Interface	USB2.0 high speed
Display	2.8” Color TFT Touch Screen
Speaker Output	8ohm1W
Weight	69g
Dimensions	60(W) * 12.5(D) * 94(H) mm

Trouble Shooting

What should I do if there’s no sound when playing?

You should check the volume first. If the volume has been turned up, maybe the memory format of the device is incorrect.

If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

For information and support, www.lenco.eu